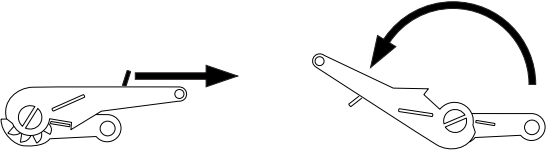
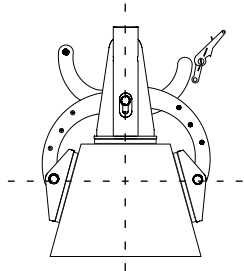
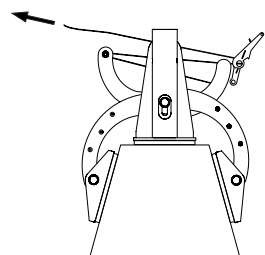
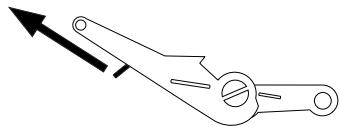
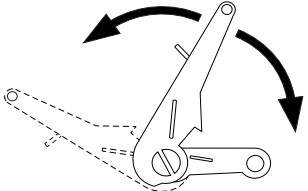
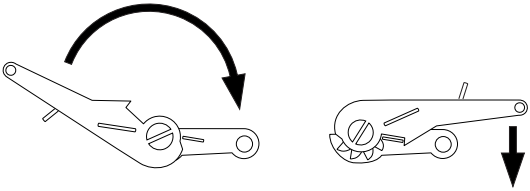
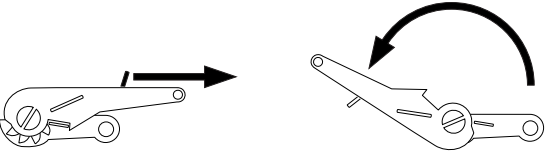
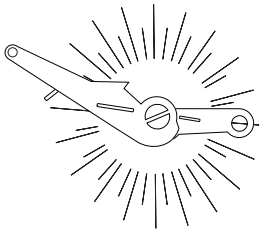
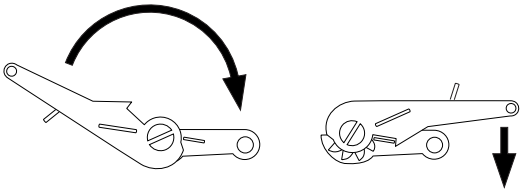


<p>1</p>  <p>Pull the lash and pivot the ratchet lever until the end stop, then the strap is loosened.</p>	<p>2</p>  <p>Place the TWONG on to the concrete safety barrier and align the TWONG so that it is centered.</p>	<p>3</p>  <p>Tighten the strap through the eyelet of the ratchet and pull the strap tight.</p>
<p>4</p>  <p>Pull the lash to loosen the ratchet lever.</p>	<p>5</p>  <p>Push the ratchet lever up and down until sufficient strain is reached.</p>	<p>6</p>  <p>Push the ratchet lever completely down to fix it.</p>

DISMANTLING

<p>1</p>  <p>Pull the lash and pivot the ratchet lever till the end stop.</p>	 <p>ATTENTION! The pretension force is released with an impact.</p>	<p>2</p>  <p>Close the ratchet lever for the transport to prevent damage and material deformation.</p>
---	--	--